

# Monteringsveiledning


Rev. 20130904-1

# Svane Lux




## Dusjkabinett


80x80x200
























90x90x200

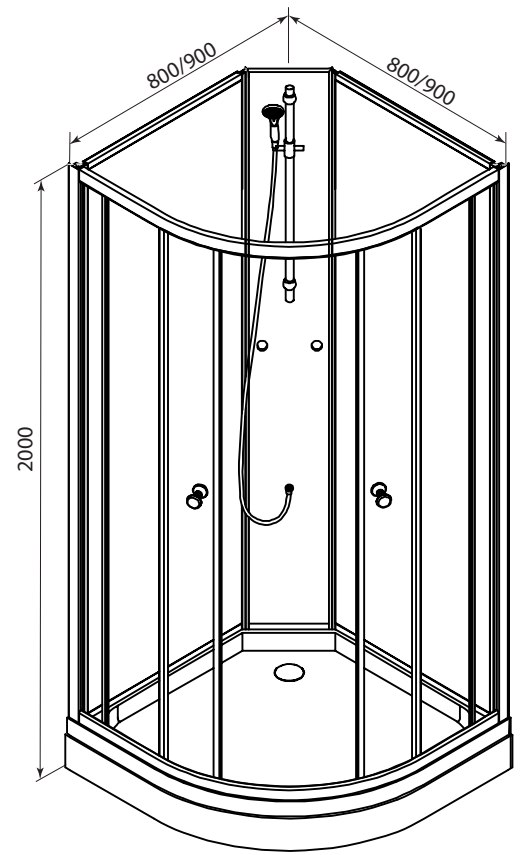



1

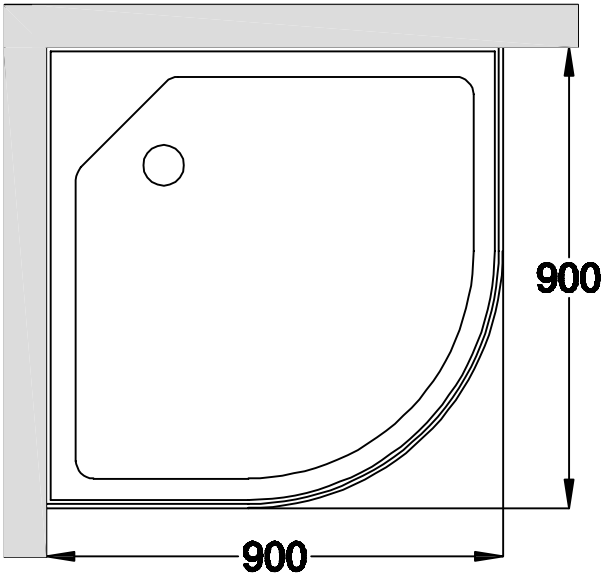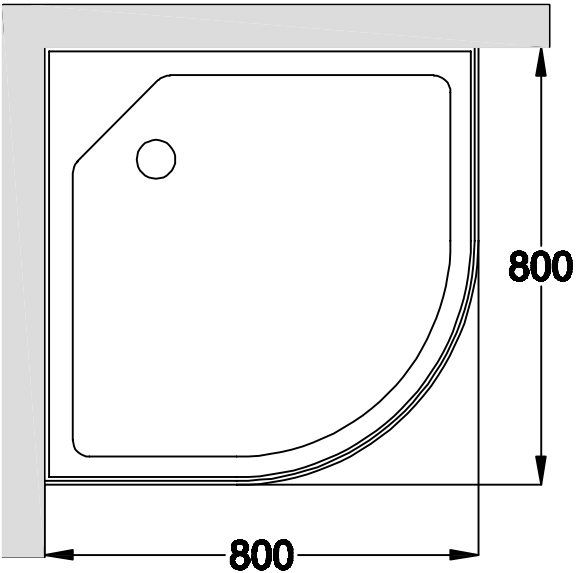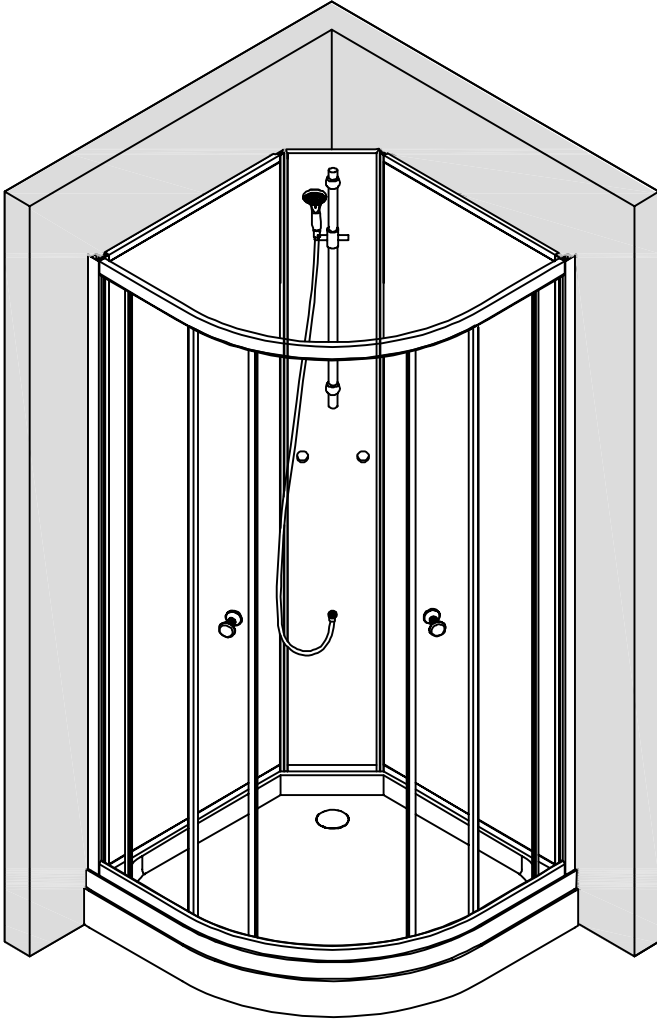


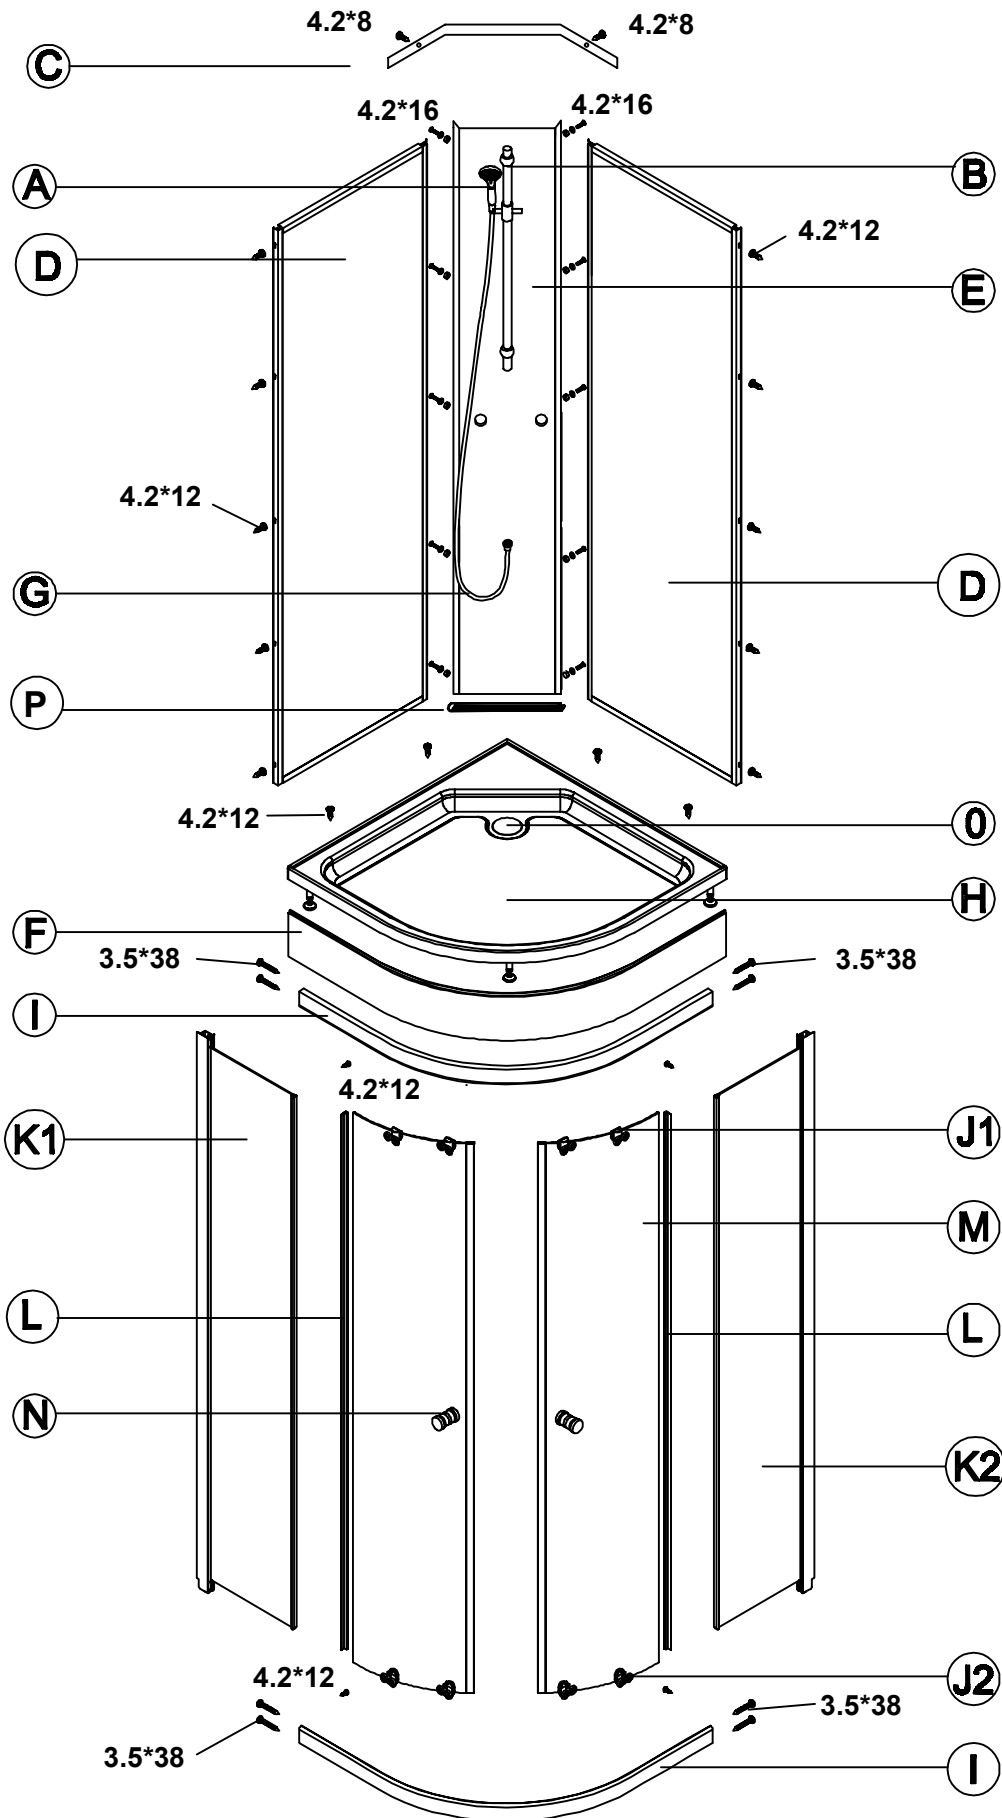


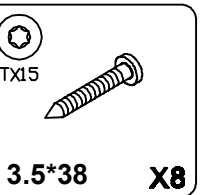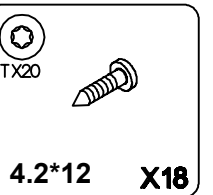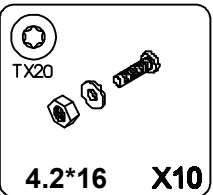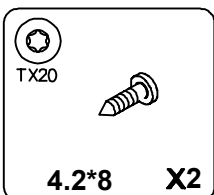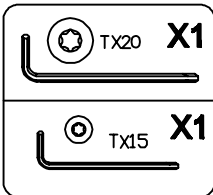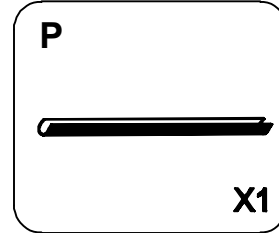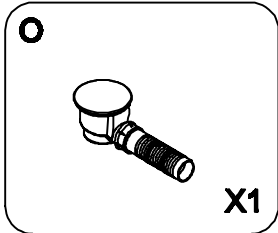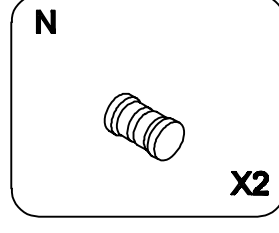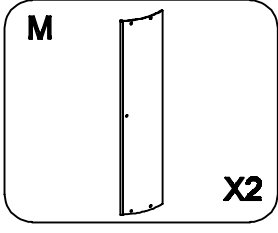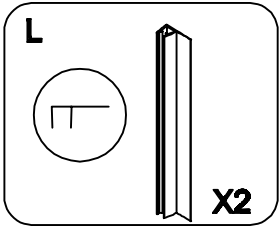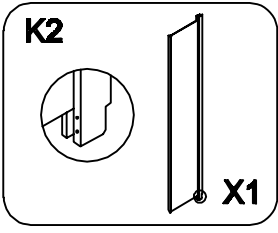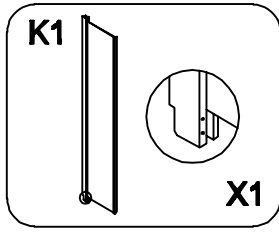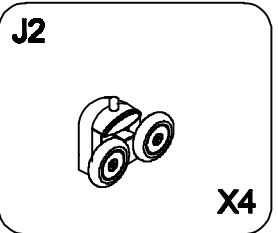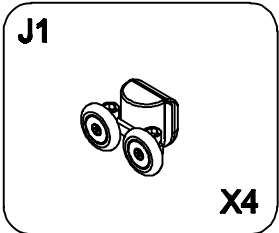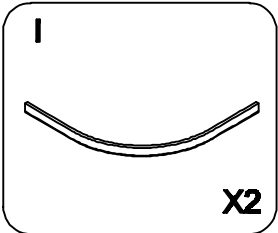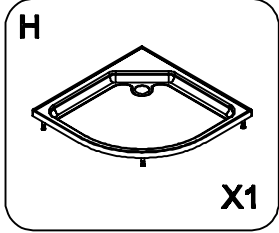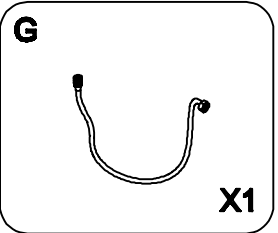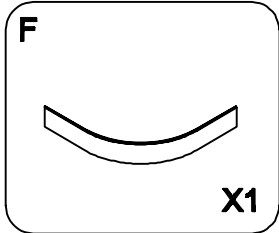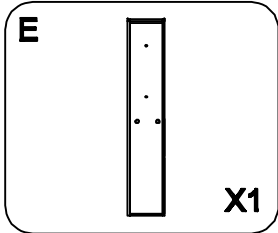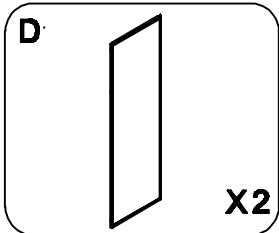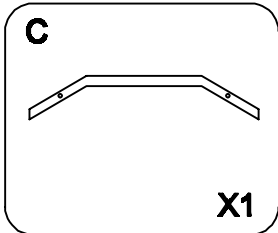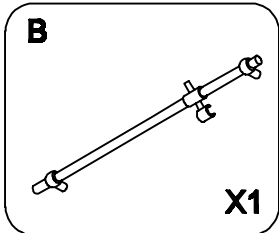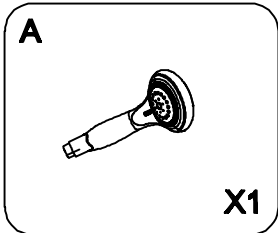








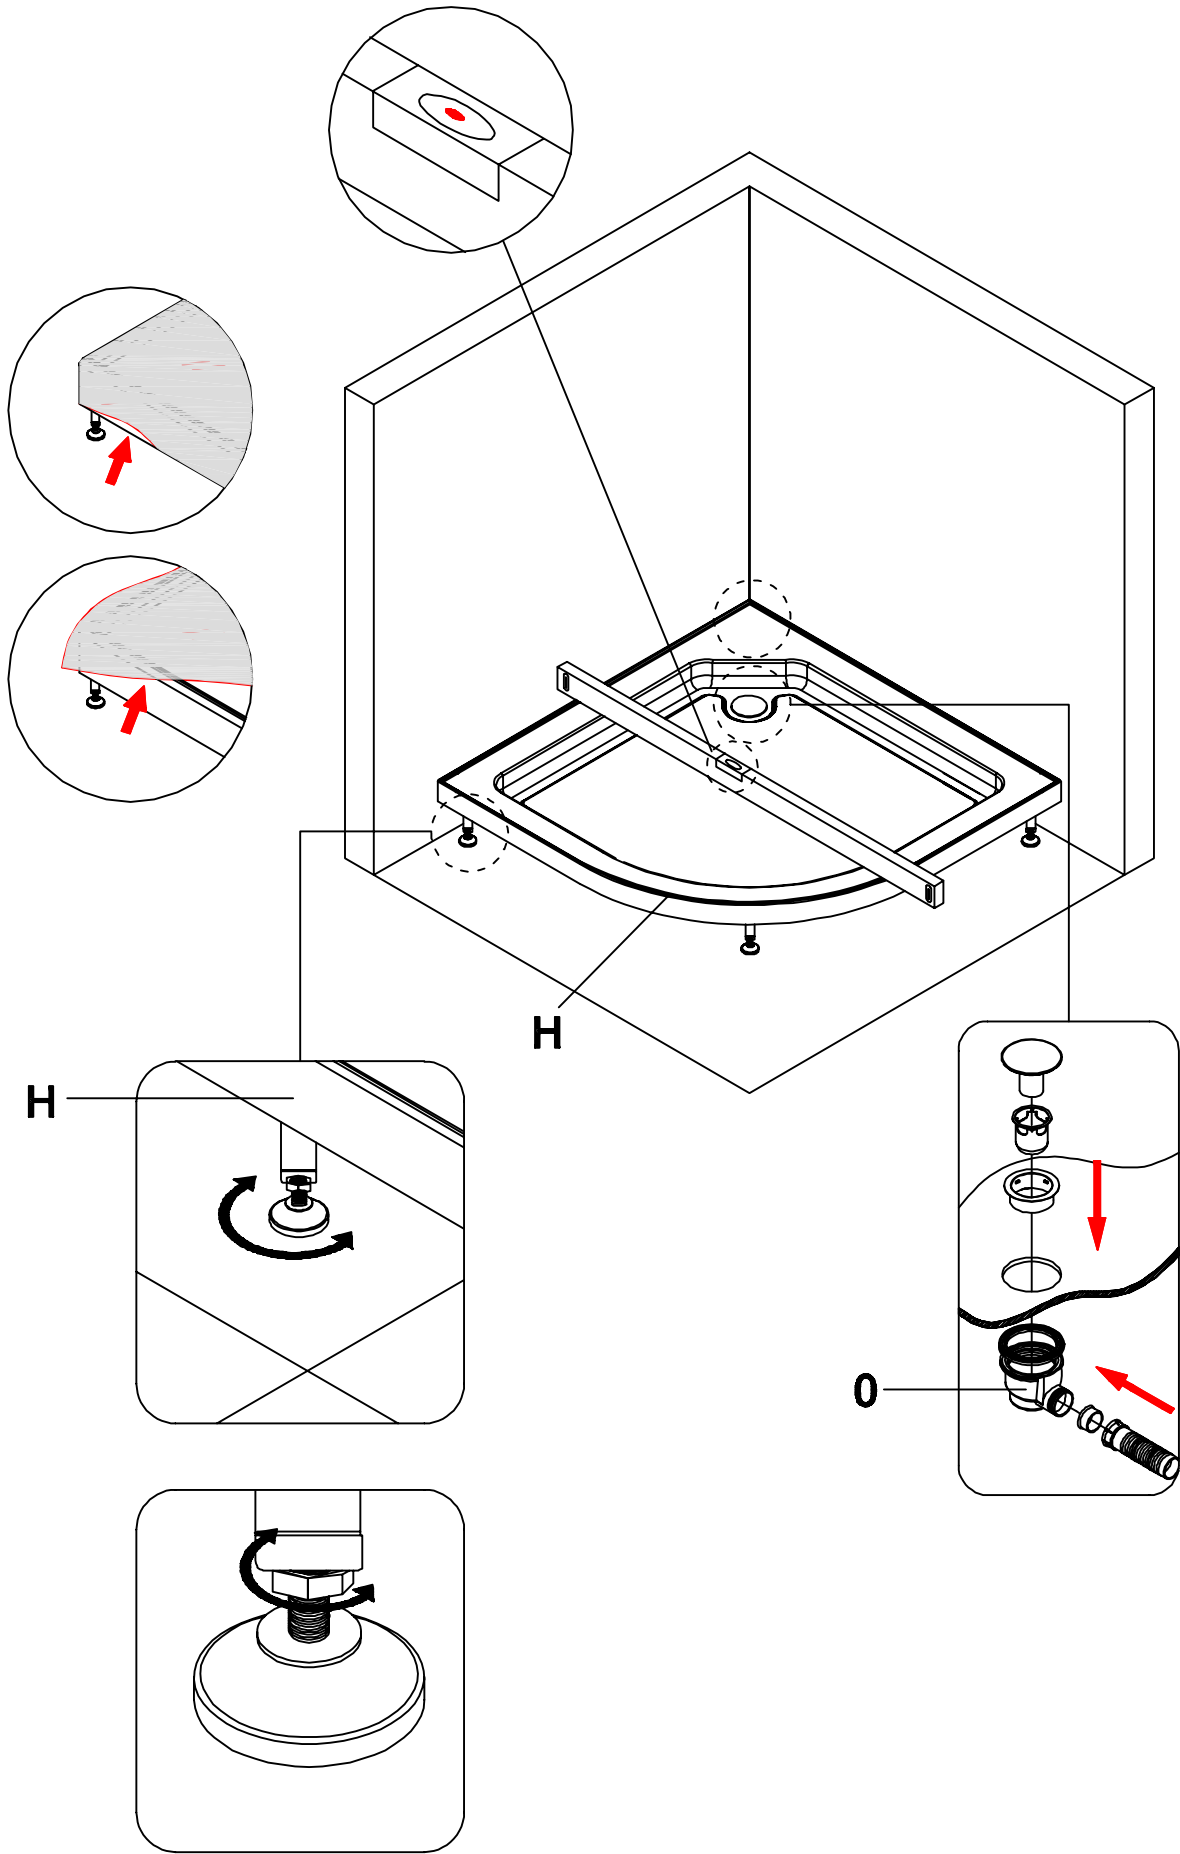


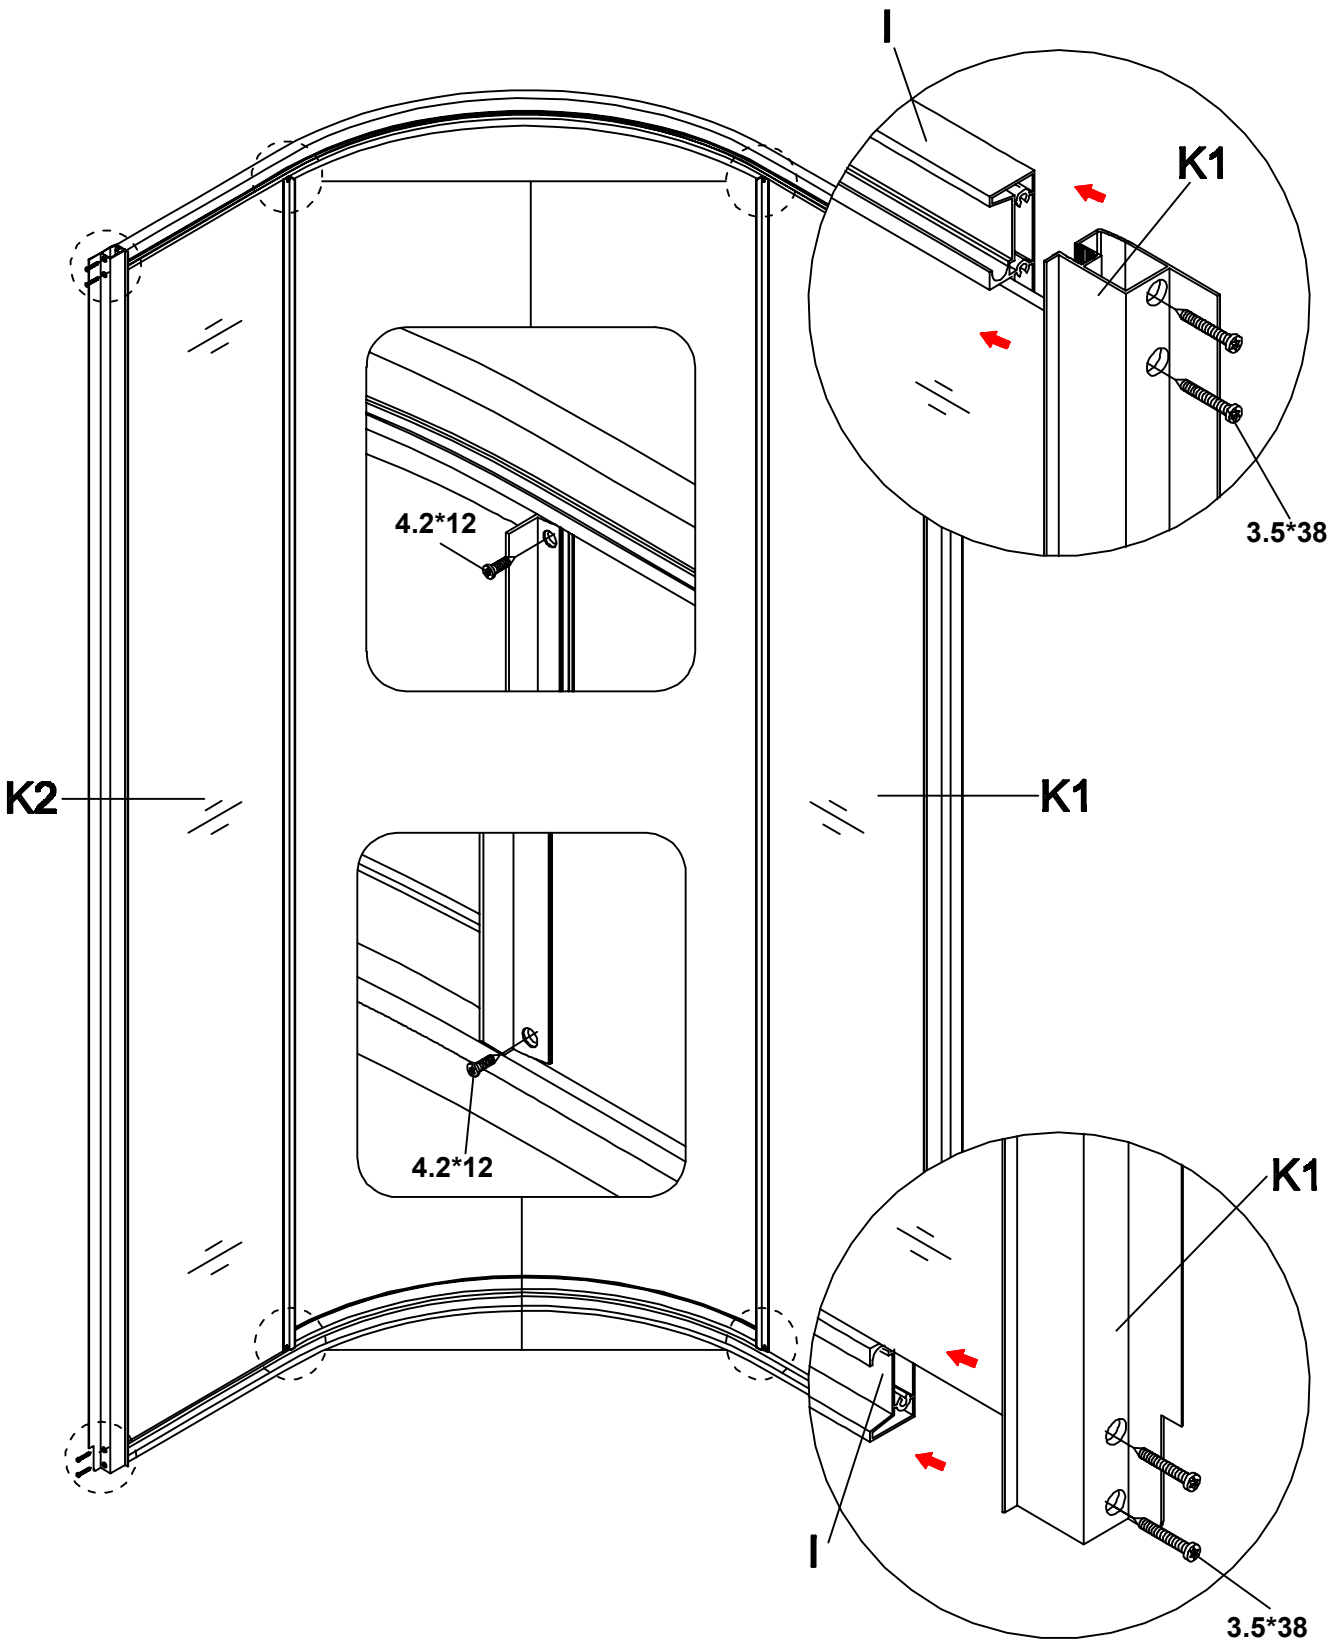

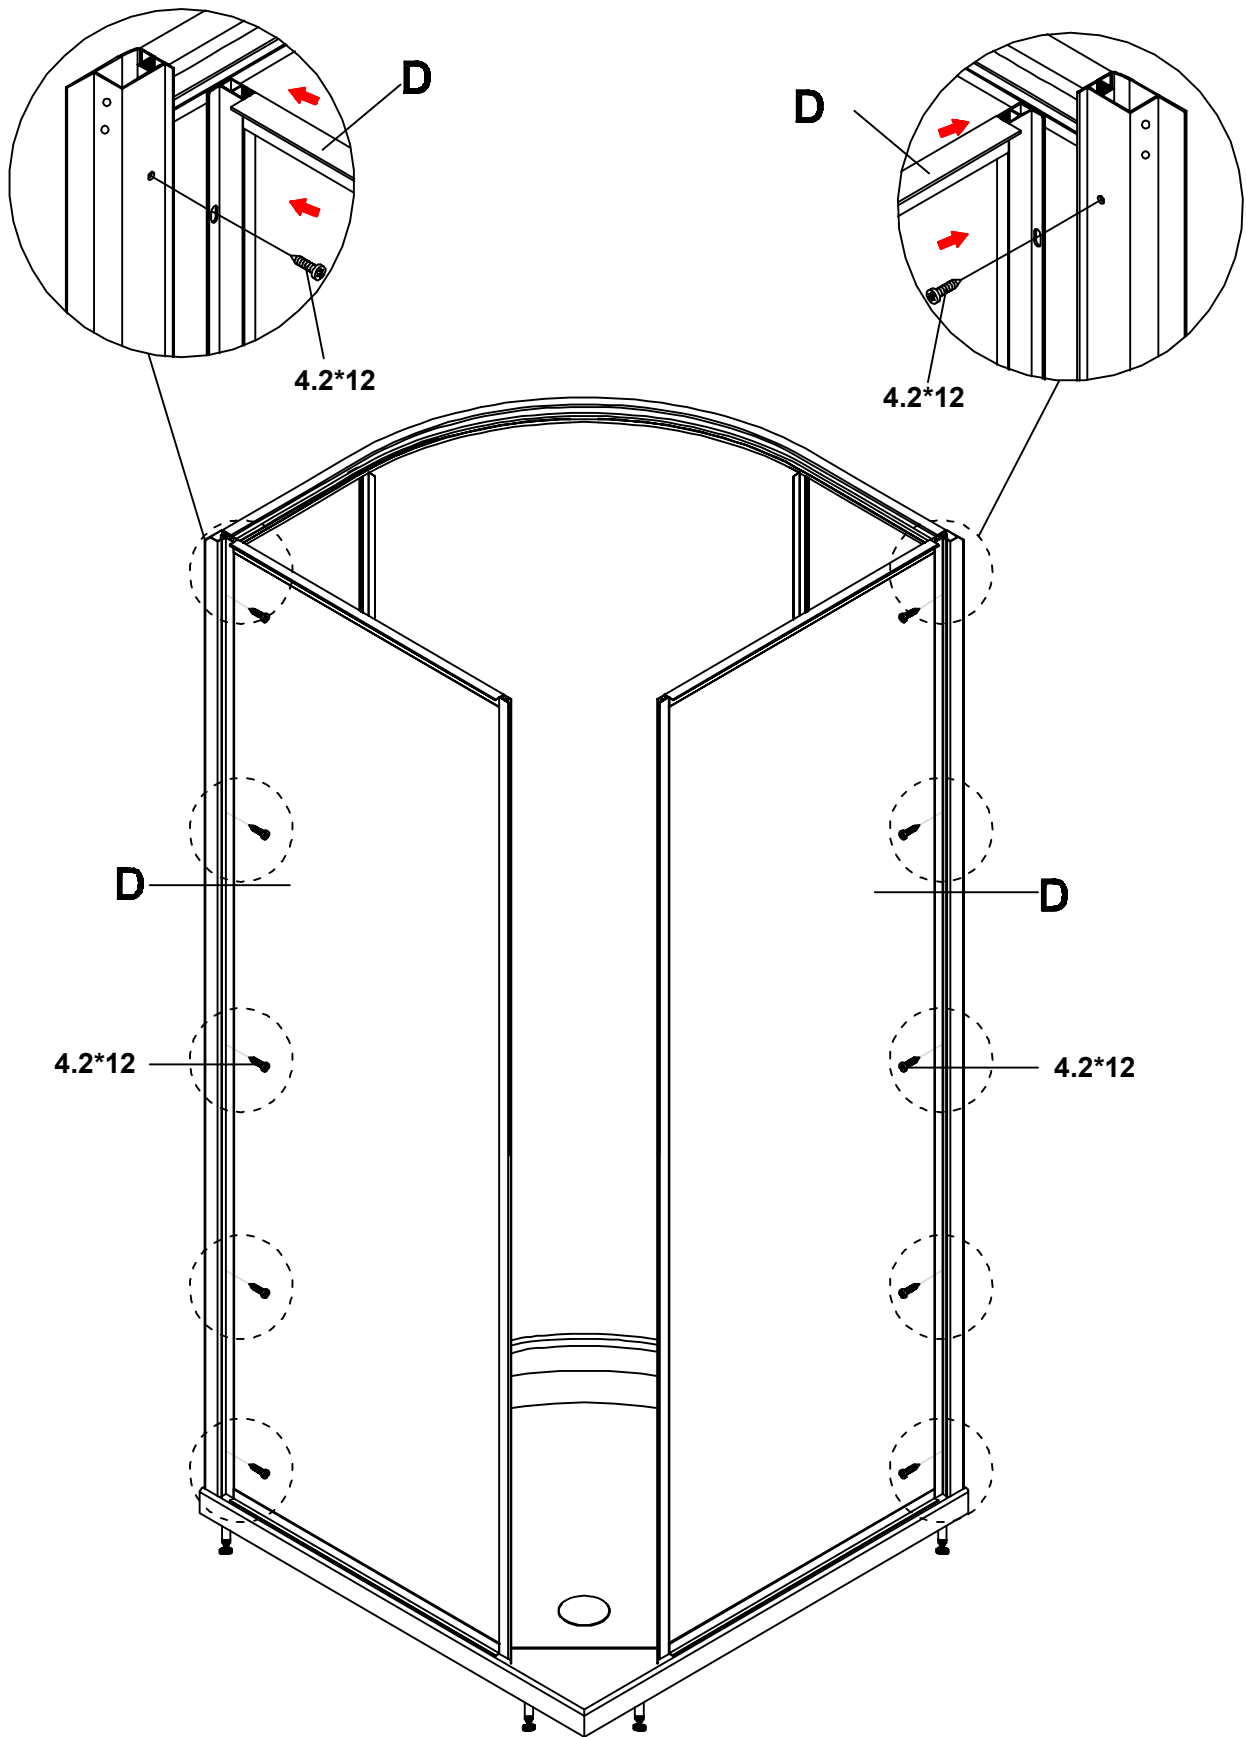

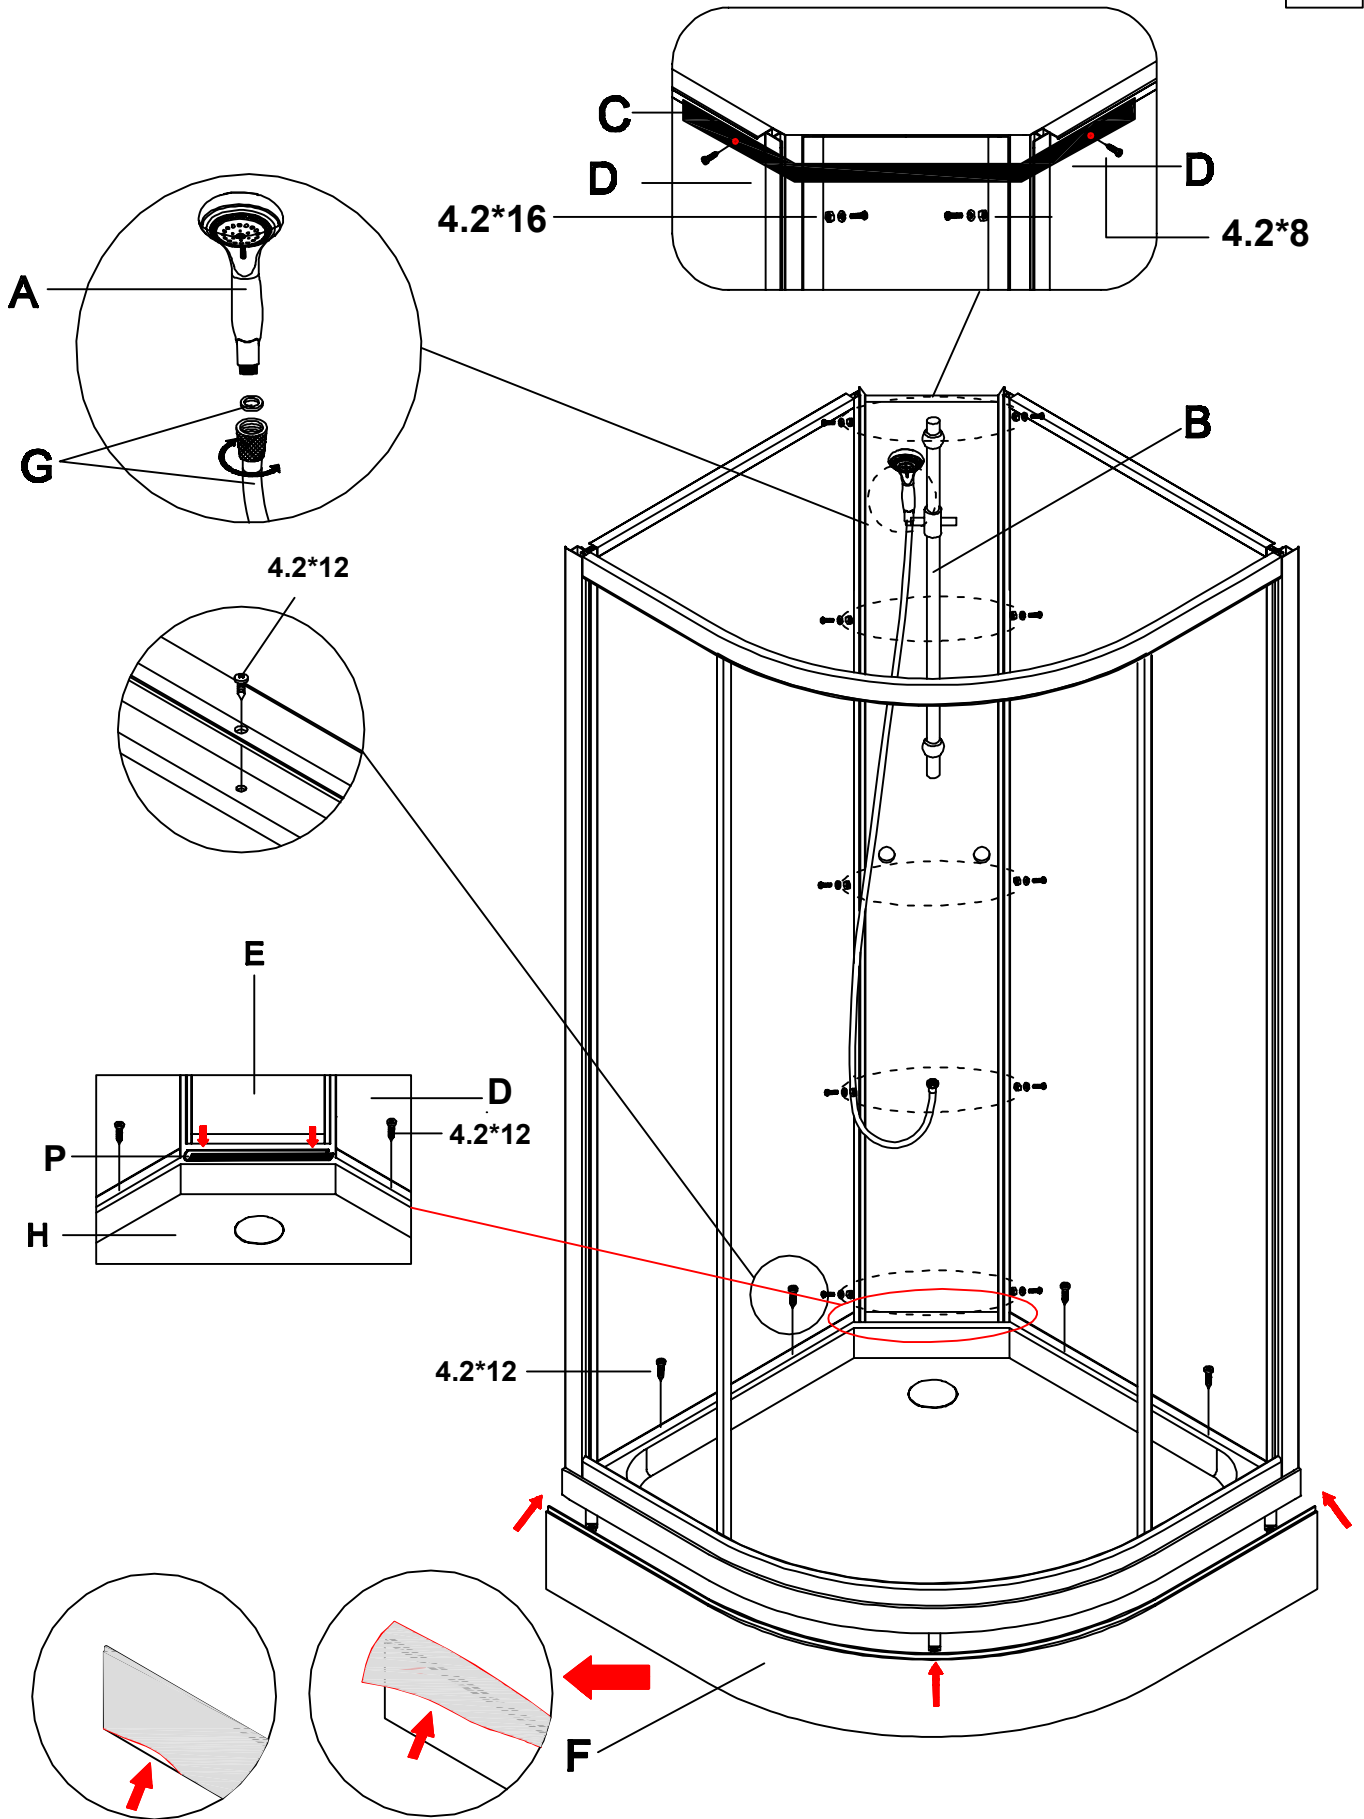



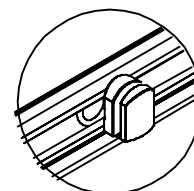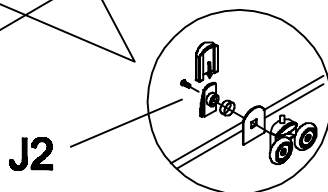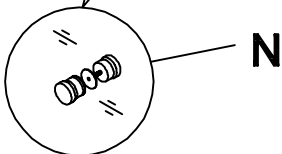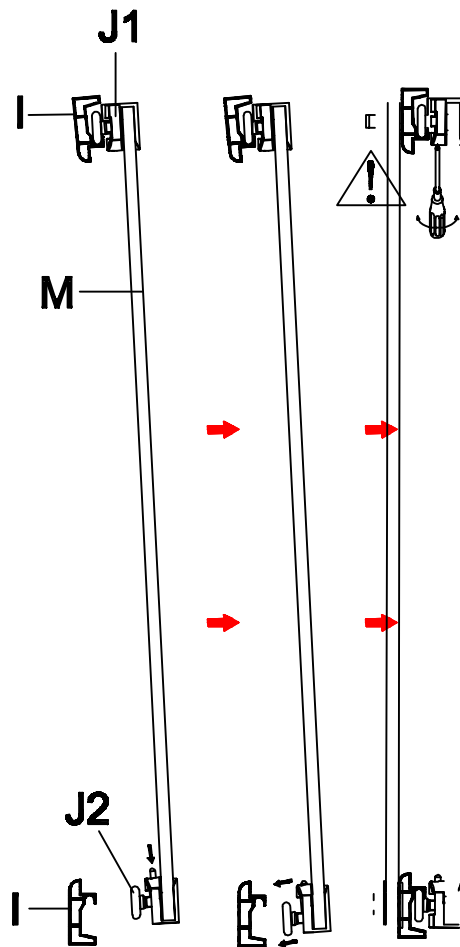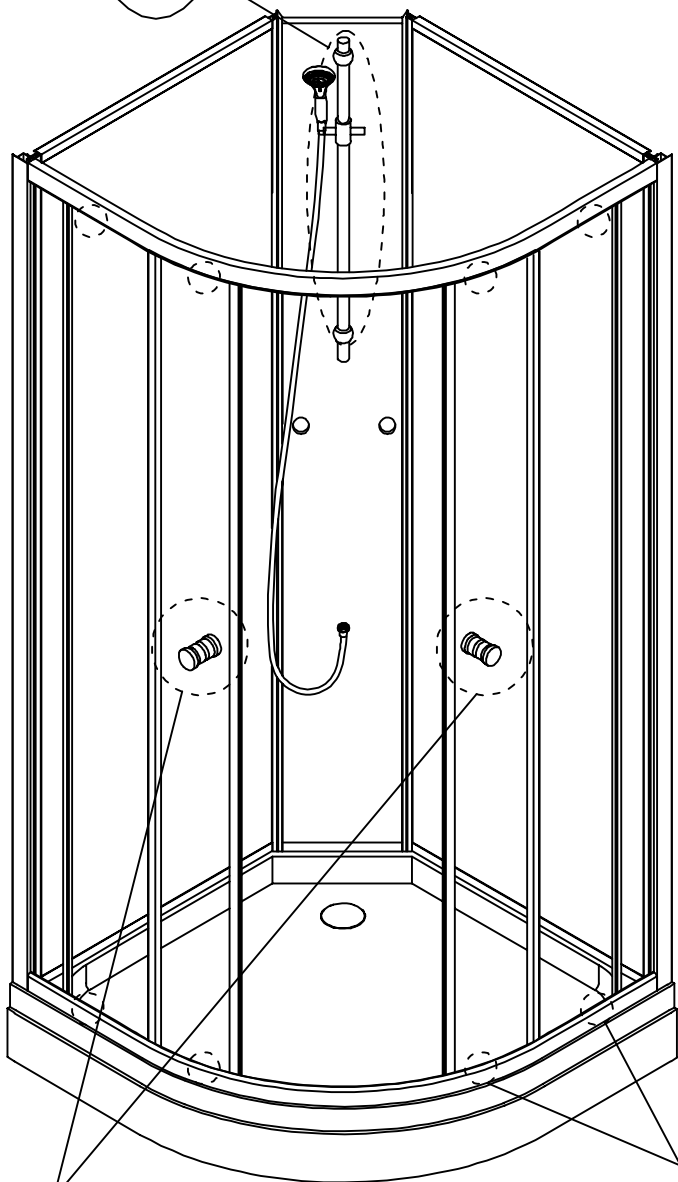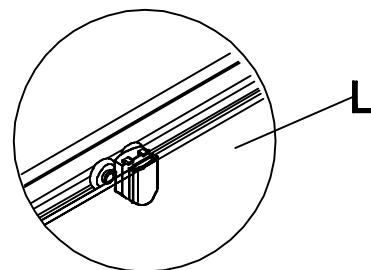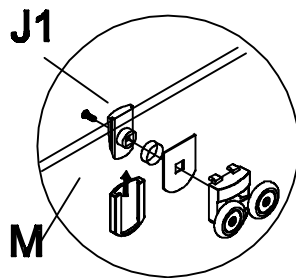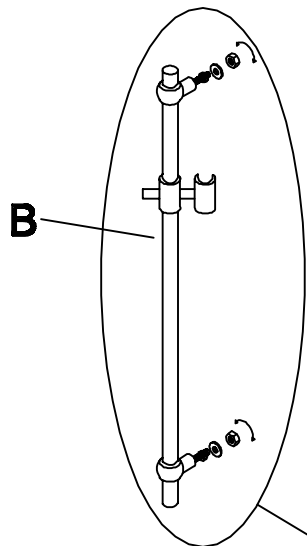

---

duxa bad

Hamnevegen 57 • 5200 OS  
Telefon 51 21 22 10 • Telefaks 52 22 31 70 • ePost [service@duxa.no](mailto:service@duxa.no)